



CLEANING PRODUCTS FOR PANS AND TUBING

CDL CLEANING PRODUCTS

667470 ISOPROPYL 70% ALCOHOL (18.9 LITRES)

READY TO USE

WITH THE HELP OF A CDL DOSER, PUT 15 ML PER TAP AND 1/2 TO 1 LITRE PER MAINLINE DEPENDING ON THE LENGTH IN VACCUM MODE BETWEEN 15 TO 18 HG AND LEAVE IN THE SYSTEM, RINSE IN BEGINNING OF NEXT SEASON. CLOSE THE EXTRACTOR VALVES AND CLEAN SO THE ALCOHOL DOESN'T DAMAGE THE INSIDE.

CLEANING PRODUCTS FOR PANS

66284 SANI-CLEAN PAN CLEANER (4 LITRES)

1G/100G

667474 GLACIAL ACETIC ACID (20 LITRES)

2G/100G

SANI-CLEAN IS A CLEANER FOR EVAPORATOR PANS MADE WITH FOOD CONCENTRATE PHOSPHORIC ACID.

USAGE GUIDE

Fill the pans with filtrate or clean water. Fill to the last line.

Add 1 gallon of SANI-CLEAN per 100 gallons of water, heat water (close to boiling point without reaching it).

Stop heating and let rest for at least 3 hours or all night for a more intense wash.

Drain and rinse well with clean water.

Fill pans with soft water and boil for 15 minutes to ensure there is no acid residue.

Add baking soda as needed to neutralize the acidity of the water.

Drain and rinse well with clean water.

Never use abrasive products, steel brushes or other products that contain chlorine or muriatic acid.

If there is burnt syrup on the sides of the pans, use a cold oven cleaner.

The product will melt the syrup without the use of abrasive products.

To bring back the shine, use a mousing glass cleaner.

IMPORTANT: If there is any acid residue left in the pans between the seasons, this will damage the pans.

There may be many small perforations at the bottom of the pan where there was acid.

Avoid food contamination during usage and storage.

All surfaces that come in contact with foods must be rinsed with clean water before being reused.

Gallons of water in CDL water pan (US GALLONS)

| Dimension (Feet) | Equality with the grooves | With 1 inch | With 2 inches | Each inch over the grooves |
|------------------|---------------------------|-------------|---------------|----------------------------|
| 2 x 4 | 8.4 | 13.2 | 18 | 4.8 |
| 2 x 5 | 12 | 18 | 24 | 6 |
| 2 1/2 X 5 | 14.4 | 21.4 | 28.4 | 7 |
| 2 1/2 x 6 | 22.3 | 29.8 | 37.3 | 7.5 |
| 3 x 7 | 38 | 51 | 64 | 13 |
| 3 x 8 | 43 | 58 | 73 | 15 |
| 4 x 8 | 61 | 81 | 101 | 20 |
| 4 x 10 | 73 | 97.5 | 122 | 24.5 |
| 5 x 10 | 91 | 121.5 | 152 | 30.5 |
| 5 x 12 | 99 | 135.5 | 172 | 36.5 |
| 6 x 10 | 103 | 139.5 | 176 | 36.5 |
| 6 x 12 | 112 | 156 | 200 | 44 |

668041 ROBY-BRILLANT CLEANER (4 LITRES)

POUR SOUCHE, PANNE EXTÉRIEUR. POUR MODE D'EMPLOI SE RÉFÉRER À L'ÉTIQUETTE SUR LE CONTENANT.