



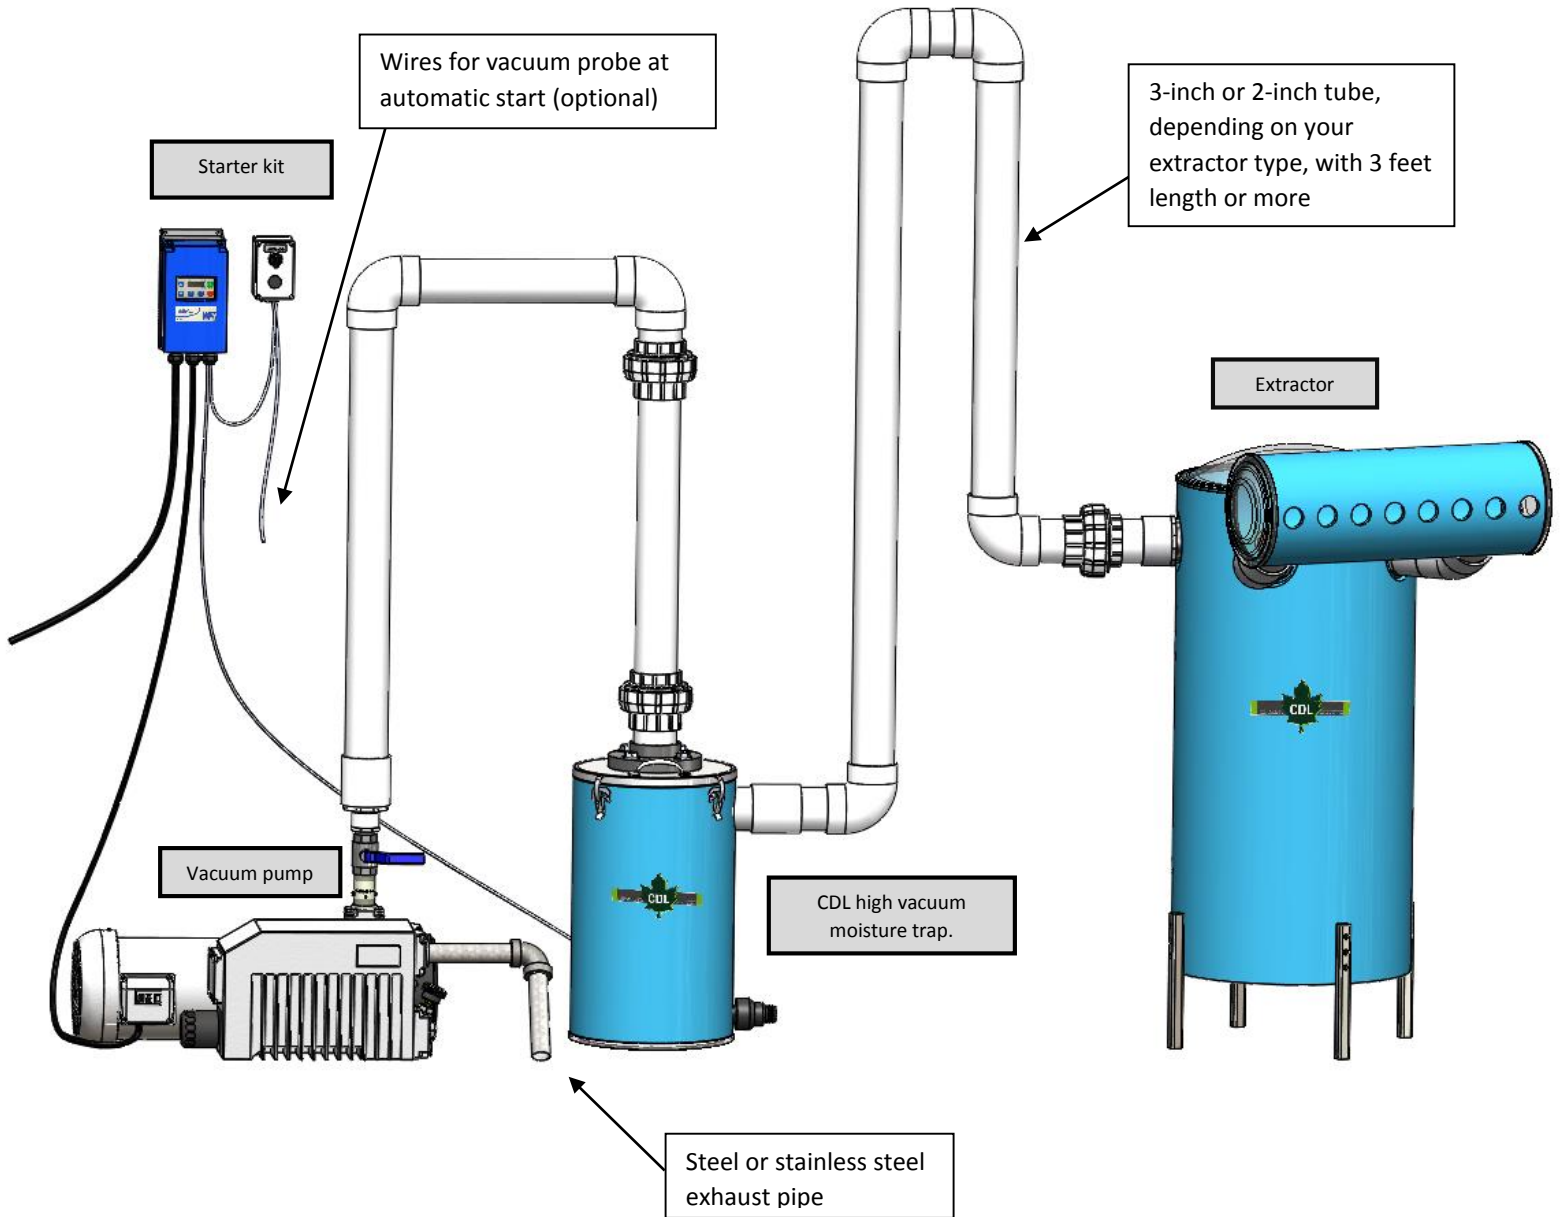


# Installation diagram of high vacuum pump system with CDL moisture trap




**Maintenance Instruction for  
unscrewed union. Comes with high  
humidity vacuum trap.**

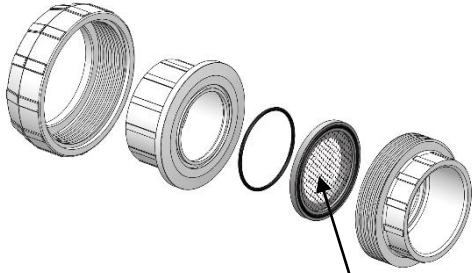

Open and clean the gate of  
the connector if there's  
presence of ice or dirt.

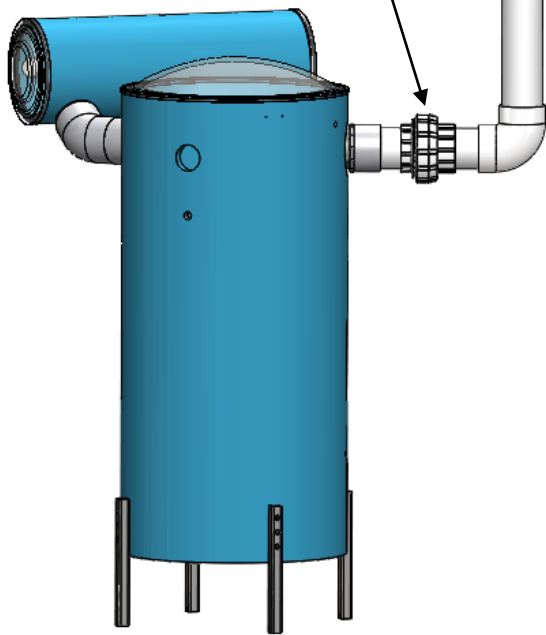

Screwable union for easy opening of  
the moisture trap

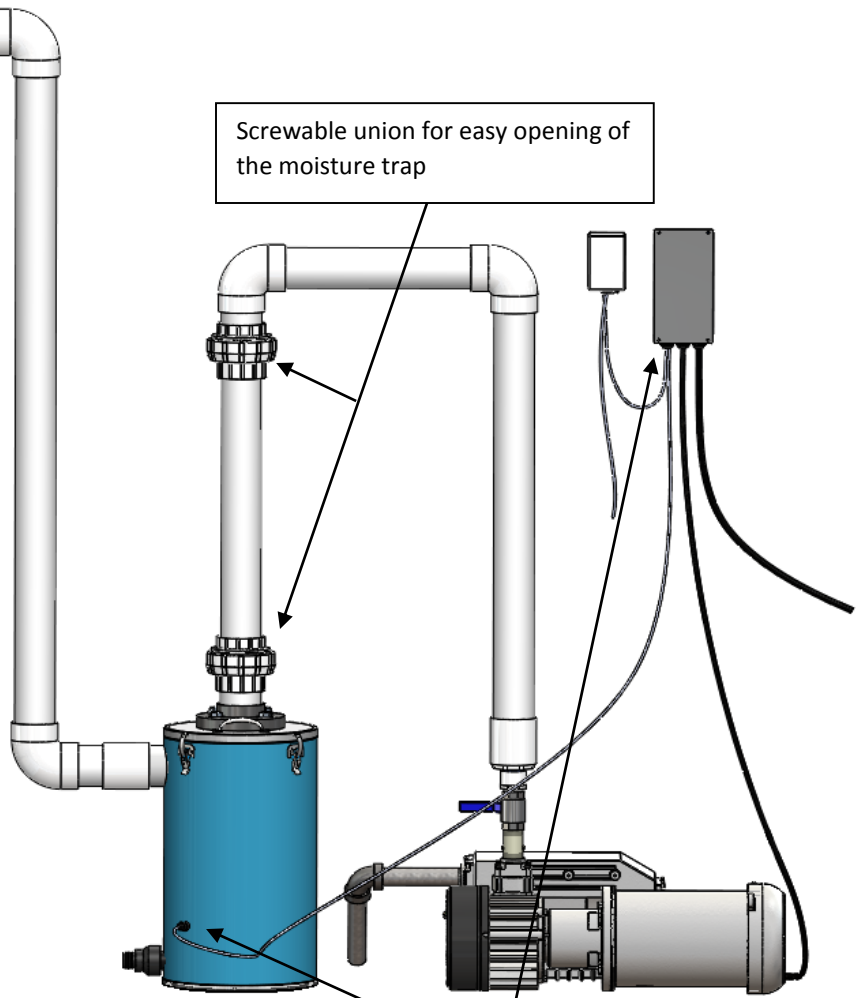

**Float switch for pump stop if there's water accumulation**

Connect the two wires of the CDL moisture trap in the space  
provided on the starter.

