

22/03/2018  
Version 1.0

CDL

# USER MANUAL

# LIQUID DEFOAMER DOSING DEVICE





# Liquid defoamer dosing device user manual

## TABLE OF CONTENT

PRODUCT SCHEMATIC	3
INSTALLATION INSTRUCTIONS	5
OPERATION SETTINGS	8
TOUCH PAD DESCRIPTION	8
DETECTION SENSITIVITY SETTING (SET: _ DET:)	9
DEFOAMER COLUME SETTING (QTY)	9
CYCLE TIME SETTING (CYC)	9
LANGUAGE SETTING (LANG)	10
ALARM DELAY IN SECONDS (T_ALARM)	10
PROGRAMMER ACCES CODE ONLY (PWD)	10

# PRODUCT SCHEMATIC

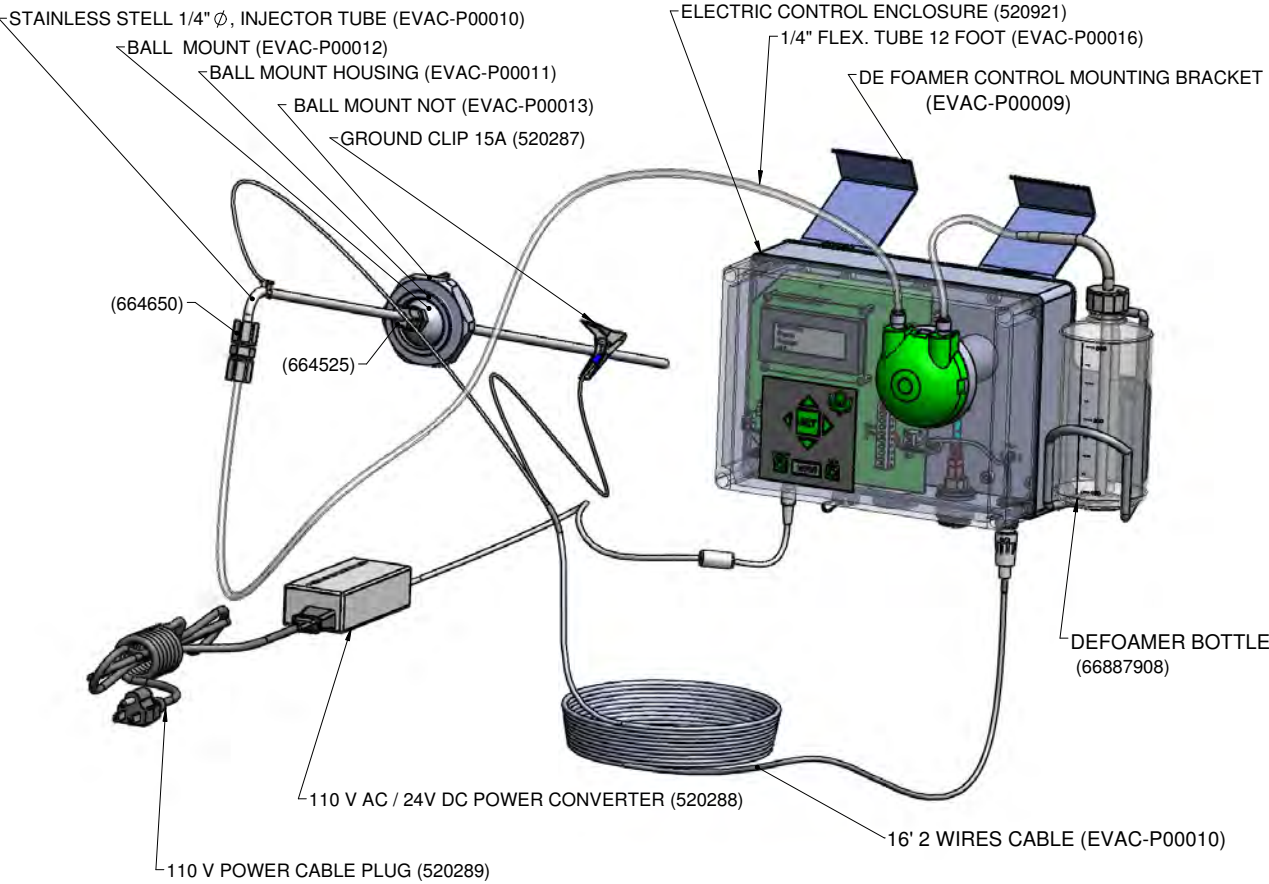

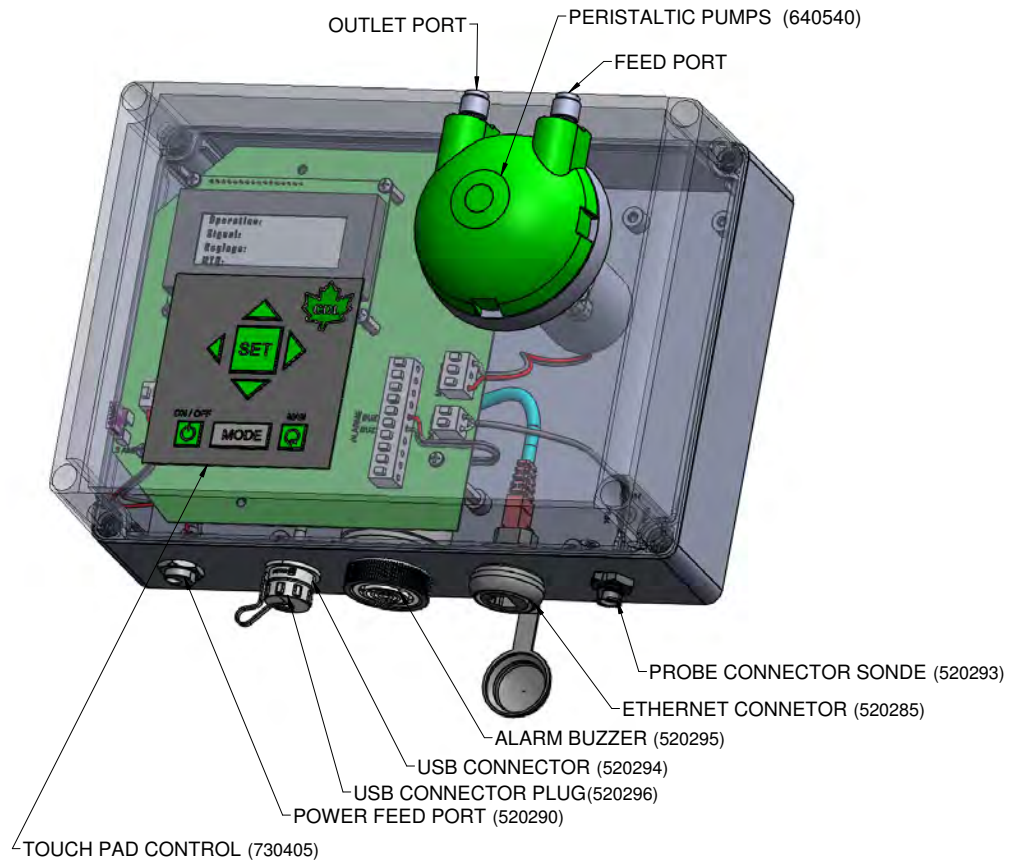

# INSTALLATION INSTRUCTIONS

Hang control box on evaporator side. Shape of bracket allows it to be fixed under flue pan head. You may manually bend brackets to adjust support.



Drill a 2-inch hole on hood with a drill and holesaw or knockout punch to install ball joint where foam rises.



Unscrew 1/4 adapter nut so that the probe can be inserted into ball joint. Insert probe into the swivel until tip of stem is 2 inches lower than top of flue pan divider. Tighten white nut.





Attach probe wire (white wire) to the metal area of the probe.



Make sure you have a 110 volt, grounded electrical outlet.  
Attach ground wire clamp (Ground) to float box.



Connect 1/4 transparent tubing (EVAC-P00016) of probe to output of peristaltic pump.  
Tighten white nut.




Connect 24-volt output to control box following connections showed on drawing (Product Schematic).



Fill bottle with industry standards vegetable oil.




Follow operation settings.

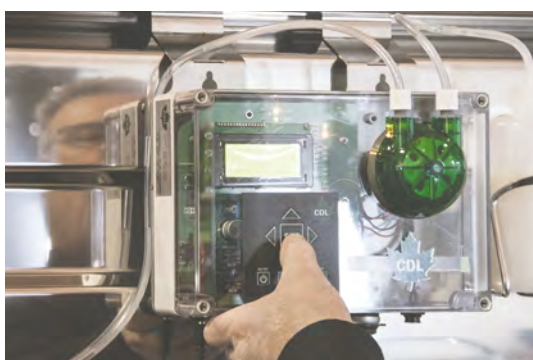


# OPERATION SETTINGS

## TOUCH PAD DESCRIPTION

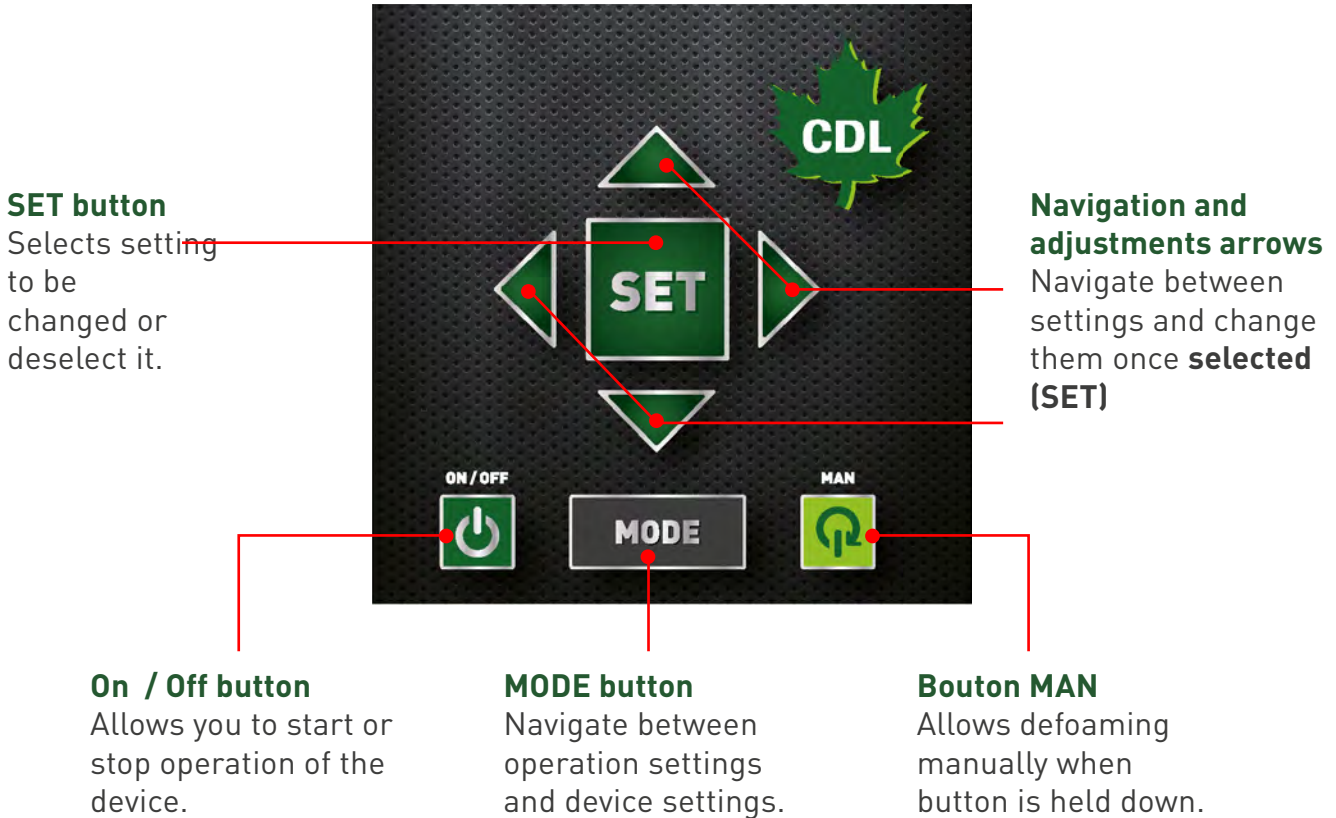



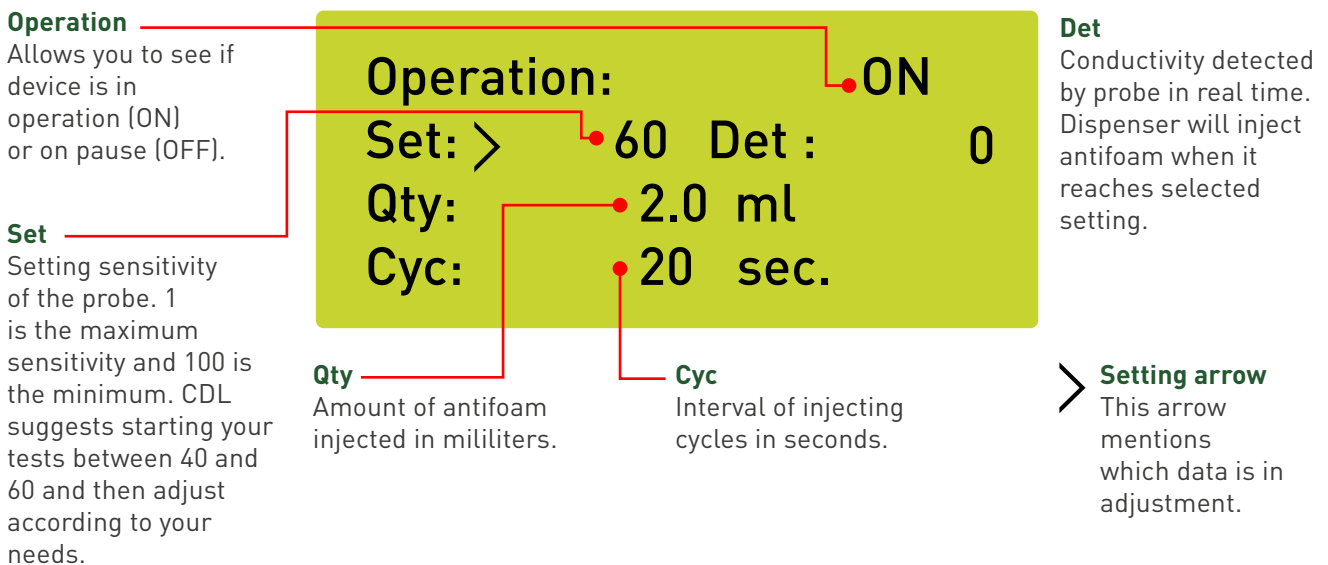



## SCREEN DESCRIPTION

















## DETECTION SENSITIVITY SETTING (SET: \_ DET:)

- Using (up or down arrows ) of touch pad, select **SET:**
- Press (SET ) to enter function setting, ( arrow  ) appears on screen.
- Using touch pad (up or down arrows ) increase or reduce value.
- Press (SET ) to record value, ( arrow  ) disappears from screen.


## DEFOAMER VOLUME SETTING (QTY)

- Using (up or down arrows ) of touch pad, select **QTY:**
- Press (SET ) to enter function setting, ( arrow  ) appears on screen.
- Using touch pad (up or down arrows ) increase or reduce value.
- Press (SET ) to record value, ( arrow  ) disappears from screen.






## CYCLE TIME SETTING (CYC)

- Using (down arrow ) of touch pad, select **CYC:**
- Press (SET ) to enter function setting, ( arrow  ) appears on screen.
- Using touch pad (up or down arrows ) increase or reduce interval in seconds
- Press (SET ) to record value, ( arrow  ) disappears from screen.







## DEVICE SETTINGS

Press (  button) to get access to device setting screen.

### LANGUAGE SETTING (LANG)

- Using (up or down arrows  ) of touch pad, select **LANG**.
- Press (SET  ) to enter setting, ( arrow  ) appears on screen.
- Using left or right touch pad arrow
- Press (SET  ) to record value, ( arrow  ) disappears from screen.

### ALARM DELAY IN SECONDS (T\_ALARM)

- Using (up or down arrows  ) of the touch pad, select **T\_ALARM**.
- Press (SET  ) to enter function setting, ( arrow  ) appears on screen.
- Using touch pad (up or down arrows  ) increase or reduce alarm delay value in seconds.
- Press (SET  ) to record value, ( arrow  ) disappears from screen.

### PROGRAMMER ACCES CODE ONLY (PWD)

- This option is only available to CDL programmers / technicians.

MAPLE SUGARING  
EQUIPMENT

